

## Pathology Guide to the Best Dressed Tubes


Apply ICE labels over the label already on tube right up to the cap

Barcode labels need to be straight

Leave a window at the back so the blood volume is visible



The following fashion statements are not appropriate for work and are likely to result in delays:

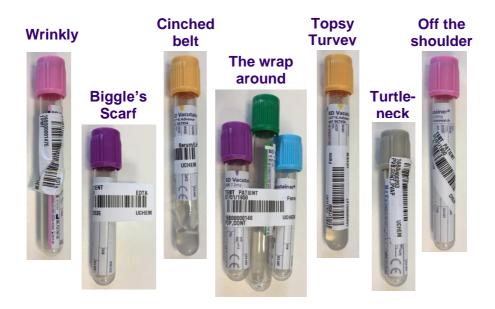

Get it straight – reduce the wait!

